


UNDER NO CIRCUMSTANCES
CAN THE PIPE PENETRATE
OR COME WITHIN 4" OF THE
PANEL SEAM.

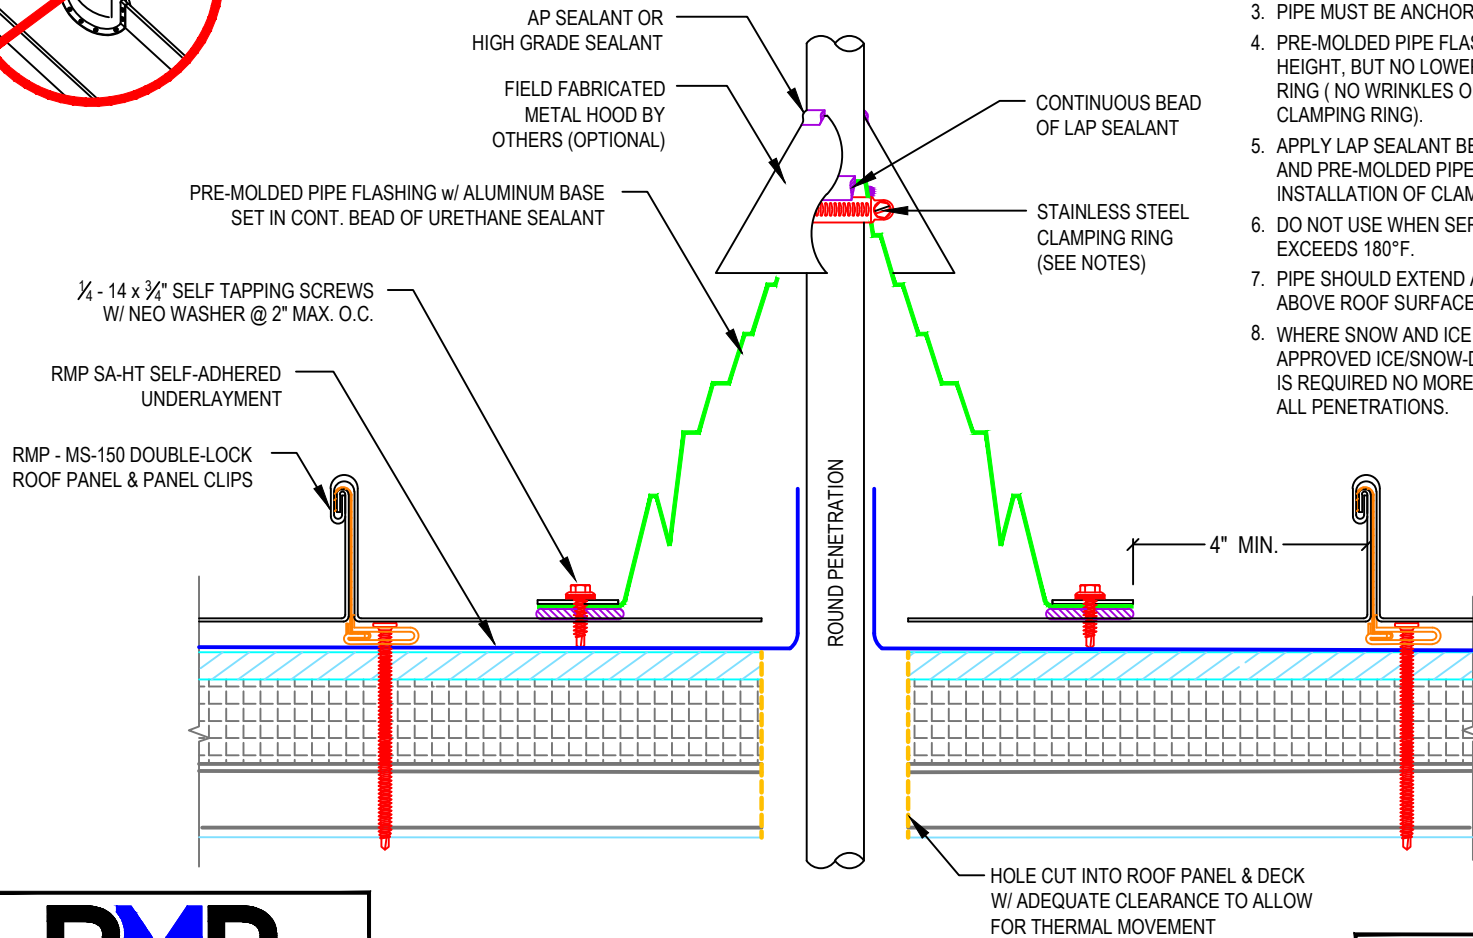

NOTES:

1. CUT HOLE IN DECK & PANEL WITH ADEQUATE PIPE CLEARANCE TO ALLOW THERMAL EXPANSION.
2. REMOVE ALL EXISTING FLASHINGS, LEADS, ETC. PIPE SURFACE MUST BE FREE OF ALL RUST, GREASE, INSULATION, ETC.
3. PIPE MUST BE ANCHORED TO ENSURE STABILITY.
4. PRE-MOLDED PIPE FLASHING MAY BE CUT TO HEIGHT, BUT NO LOWER THAN REINFORCING RING (NO WRINKLES OR FOLDS UNDER CLAMPING RING).
5. APPLY LAP SEALANT BETWEEN PENETRATION AND PRE-MOLDED PIPE FLASHING PRIOR TO INSTALLATION OF CLAMPING RING.
6. DO NOT USE WHEN SERVICE LINE TEMP. EXCEEDS 180°F.
7. PIPE SHOULD EXTEND A MINIMUM OF 8" ABOVE ROOF SURFACE.
8. WHERE SNOW AND ICE ARE COMMON, AN RMP APPROVED ICE/SNOW-DAM PROTECTION SYSTEM IS REQUIRED NO MORE THAN 36" UP-SLOPE OF ALL PENETRATIONS.

RMP
ROLLFAB
METAL PRODUCTS
www.rollfabmetal.com

PIPE PENETRATION FLASHING

2529 WEST JACKSON ST, PHX, AZ 85009
PH: (602) 275-1676 FAX: (602) 275-1739

PANEL SYSTEM: **MS-150**

ISSUE / REVISION
DATE:
01/08/2013

NOT TO SCALE

DETAIL NO.
MS150-PF